



## MANTIS CORDLESS REEL MOWER

- Push Button Start, just press the button and squeeze the handle switch; let go and the mower stops.
- Fold Down Handles for convenient storage or transporting.
- Rechargeable 24-volt NiCad Battery mows up to 2500sq. ft. (up to 30 minutes) on a full charge.
- Blade Cover keeps blade away when mowing under shrubs or low-hanging flowers.
- 5-Reel Blades, flame-hardened precision-ground steel, non-friction for longer blade life; blades do not require sharpening for many years!

.....

**Dealer's Name**



## MANTIS CORDLESS REEL MOWER



- Push Button Start, just press the button and squeeze the handle switch; let go and the mower stops.
- Fold Down Handles for convenient storage or transporting.
- Rechargeable 24-volt NiCad Battery mows up to 2500sq. ft. (up to 30 minutes) on a full charge.
- Blade Cover keeps blade away when mowing under shrubs or low-hanging flowers.
- 5-Reel Blades, flame-hardened precision-ground steel, non-friction for longer blade life; blades do not require sharpening for many years!



**Dealer's Name**

